


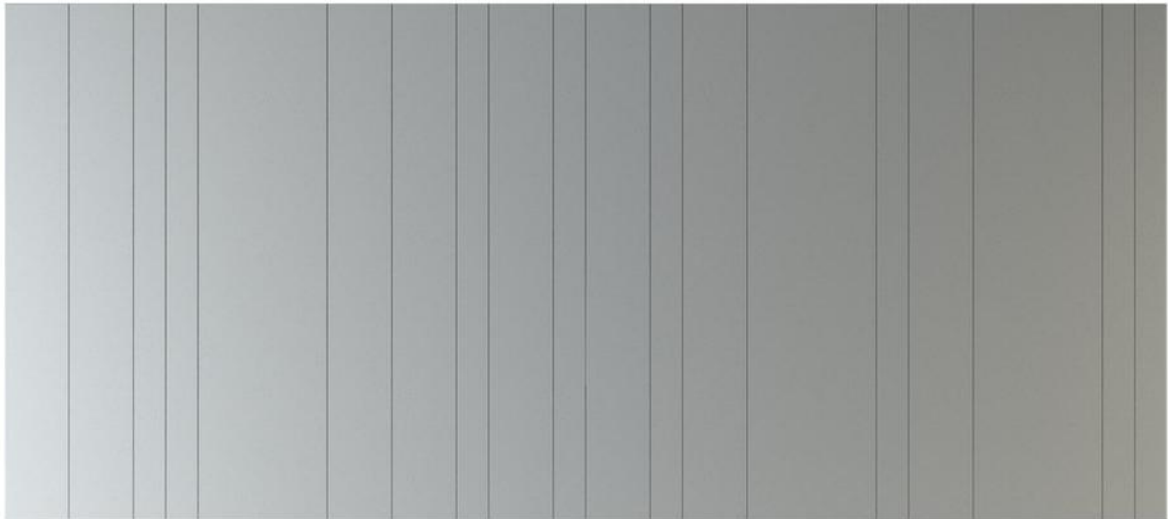


UNDERCOVER-BEVESTIGING

Montage-instructies


Undercover Mount^{1,2}

All our products come with pre-cut **Undercover** attachment points. Those points are distributed along the edge (10-15mm offset) of the panel. The exact distribution might vary depending on the particular panel design.

Undercover mounting system allows for concealed mechanical attachment of the panel to the mounting surface. The **installation hardware** (screws, bolts) needs to be selected in accordance to the surface on which panels are applied, and are **not included**.

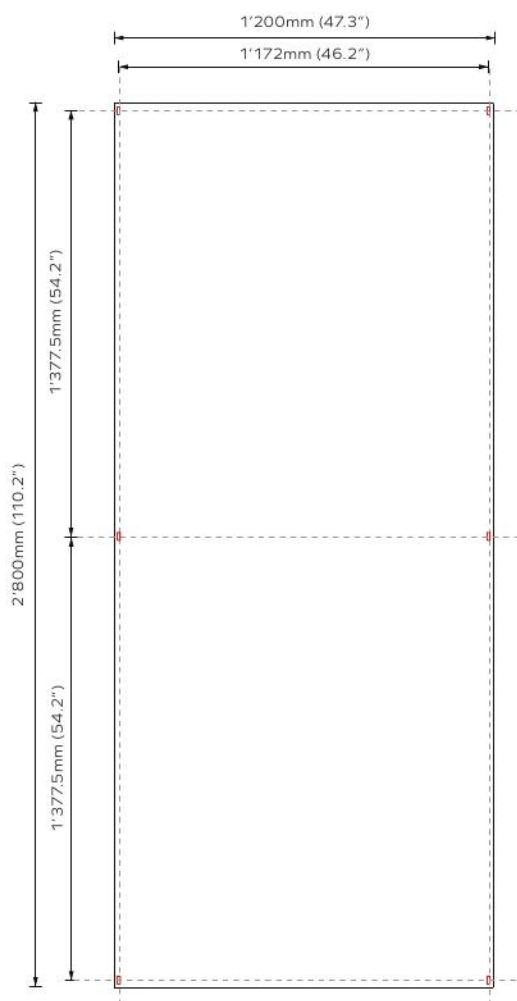


12mm Archsonic Felt panel

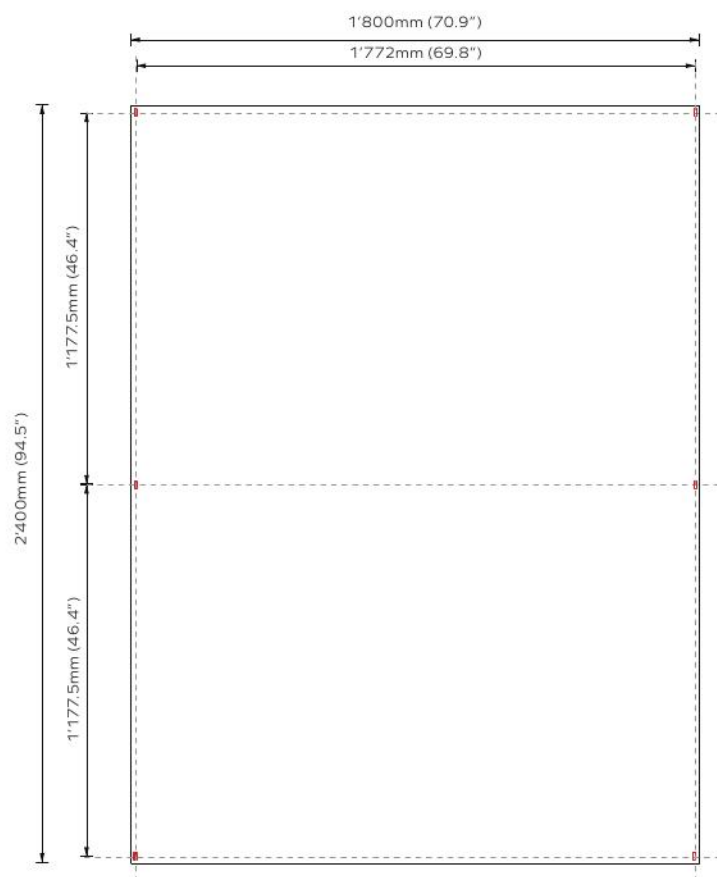

24mm Archsonic Felt panel

Geometry information

10-15mm (0.4-0.6") 8mm (0.3")

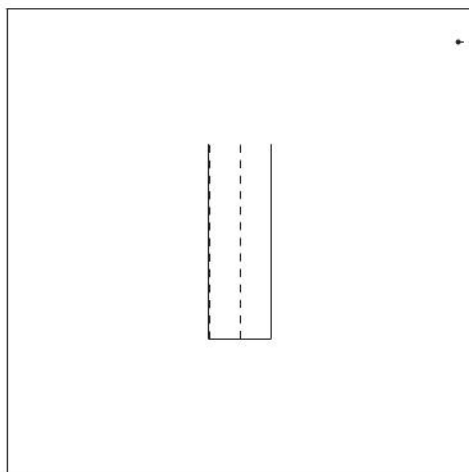


12mm

Felt panel


25mm (1")

8mm (0.3")



12mm (0.5")

25mm (1")




8mm (0.3")

Undercover Mount¹


1 Locate the Undercover cuts on the panel

Cuts are distributed along the edge (10-15mm offset) of the panel.

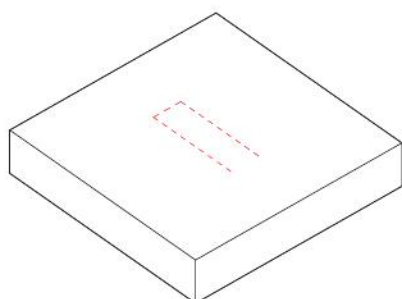


2 Pull out the edge

Use a flat head screwdriver to pull out the loose edge of Undercover cut.

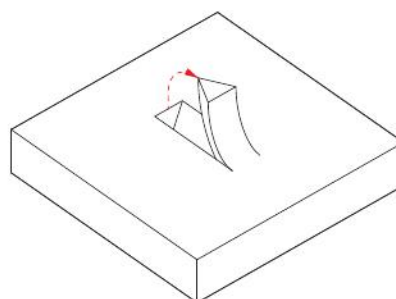


3 Install hardware

The **installation hardware** (screws, bolts) needs to be selected in accordance to the surface on which panels are applied, and are **not included**.

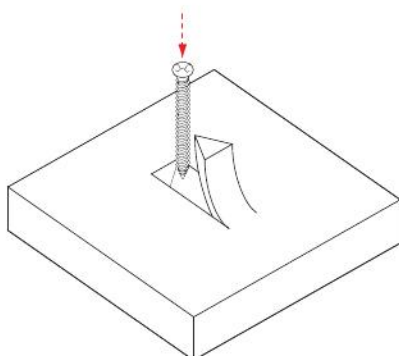

4 Close

Push in the Undercover cutout into original position.

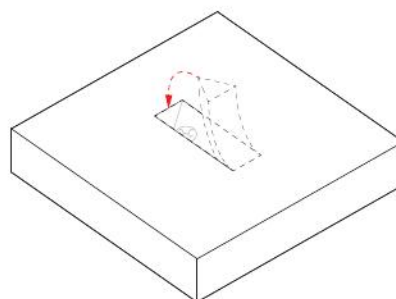


Application preview

Undercover Mount¹


Closed Undercover cut is barely visible at the surface of the panel, even at the closeup view. See the picture below that shows open and closed Undercover cut integrated in our Vertigo Wall Covering panel.



Open **Undercover** cut

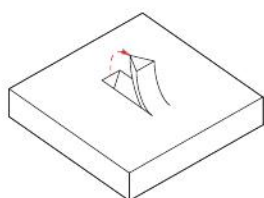

Closed **Undercover** cut

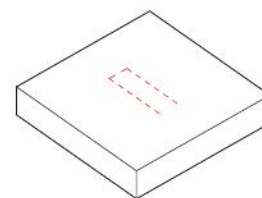

**#We
Make An
Impact**

